



# Mini WebCam

## Users Manual

### **Introduction**

Thank you for purchasing the Mini WebCam. Simply plug the Note Mini WebCam into your USB port to make your world come alive. For use with both your Notebook and Desktop PC.. Broadcast your Party or chat with video or show you LIVE!

### **Package Contents:**

- iConcepts™ Notebook Cam
- User's Manual
- Warranty Card
- CD ROM Software

### **System Requirements:**

- Windows®98,2000,ME or XP
- Pentium®III400, Celeron®AMD Athlon®processor,
- or higher (Pentium®III400,Celeron®AMD Athlon®processor,
- AGP video card recommended)
- 64MB RAM
- 100MB free hard drive space
- CD-ROM Driver
- Available USB Port
- 16-bit color display adapter

### **Software Installation**


Please place the CD into the CD-ROM driver and the software will automatically run the installation wizard; please follow the directions of the installation wizard.

Note: If the auto run function in your computer is not functioning, you must manually install the software according to the following steps:

1. Place the CD into the CD-ROM driver.
2. Click with right key on the start Menu, and then run.
3. Enter D:\Setup (If D is your CD-ROM driver letter) in the running dialog box;
4. Follow the directions of the installation wizard

### **AMCAP User Guide**

Start: Double click icon "AMCAP" on the table or select program library >ICM 532>AMCAP, there will show out the PC Camera menu

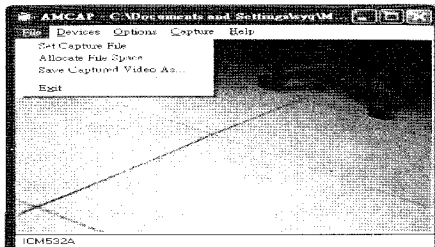

#### • File Menu:-

Set Capture File: Pre-set the name of the file which you are going to capture

Allocate file Space: Set the file size of the capture. **Please note that if the file size of the captured file exceeds the pre-set file, the balance will be cut.**

Save captured Video As: Set the saved captured video file name

Exit: Exit the AMCAP

#### • Devices Menu:

Video Device: It will show all video devices you installed. It will show ICM532A for

Mini WebCam Sound Device: It will show all audio devices you installed

#### • Options Menu:

Preview: Default is active.

Audio Format: This is an audio format setting.

Video Capture Filter: This is a video capture setting. It included brightness and contrast setting. Default setting is 50

Video Capture Pin: This is resolution setting of capture file. You may select for CIF mode (352\*288) pixels or QCIF mode (160x120) pixels

Audio Capture Filter: This is an audio setting

#### • Capture Menu:

Start Capture: Select to start capturing the video

Stop Capture: Select to stop capturing the video

Capture Audio: The default is active

Master Stream: None/Audio/Video

Set Frame Rate: To set the frame rate per second


Set Time Limit: To set the capture Video time limit, the capture video taken Help:-It will show the driver version of Mini WebCam.

#### • Play the capture file:

To play the saved capture file please double click the file from the saved directory, it will auto play the AVI player.

### VIDCAP User Guide

Start: Select program library>ICM532>VIDCAP

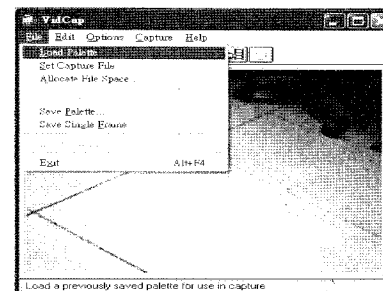

#### • File Menu:

Load Palette: Load some palette which you want to use

Set Capture File: Pre-set file name

Allocate File Space: Set file size

Save Captured file As: Set the saved Captured Video file name

Save Palette: Save Palette

Save Single Frame: Only capture one frame

Edit Captured Video: To edit the captured Video

Exit: Exit the VIDCAP Mode

#### • Edit Menu:

Copy: Copy a file

Preference: Adjust image properties

### • Options Menu:



Audio Format: This is an audio format setting  
 Video Format: This is a video format setting  
 Video Source: This is a video capture setting. It includes brightness and contrast setting. The default is 50 HZ  
 Video Display: Default is active  
 Compression: To set compressed mode for the video  
 Preview: Default is active

### • Capture Menu:

Single Frame: Only capture one frame  
 Frame: To capture many frames  
 Video: To set frame rate

## Video Conference User Guide

Start: Run the videoconference software Microsoft Net Meeting™ on your computer

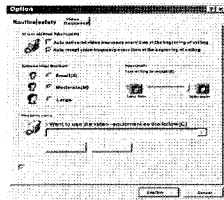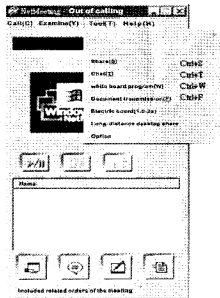

### • Calling Menu:

New: Add a new address you want to call  
 Manage: You preside the meeting personally  
 Content: Meeting Contents  
 Log In Directory: Write In Directory  
 Directory: Add Directory  
 No Interrupting: no interrupting  
 Automatically Accept Called: Accept others' calling

Speed Dial: To establish Speed Dialing  
 Hang off: Cancel  
 Exit: Exit the calling

### • View Menu:

State Bar: To Display State Bar  
 Dial Board: To Display Dialing keyboard  
 Parent Panels: To display double panels  
 My Video: To Display Live  
 Cut: To Cut unnecessary information  
 Only detect document: Only detect document  
 Above: To Display above layer

### • Tool Menu:

Video: To Hold Video Conference  
 Adjust: To Adjust Image Property  
 Sharing: To Join in the Video Conference  
 Talk: To Chat with others  
 White: Electronic White Board  
 Send File: Transfer file  
 Remote Desk Sharing: Share with others via internet  
 Option: Other Options

### • Help Menu:

Help Content: To Read Help contents  
 Read Me: Information about Netmeeting  
 Microsoft On The Web: To Visit Microsoft web  
 Support Online: To Get Support Online  
 About NetMeeting: To Show the Version of NetMeeting

## SPECIFICATION:

Product Type: Mini WebCam  
 Electronic Coupling Element: CMOS Sensor 100K pixels  
 Image Resolution: 352\*288 pixel  
 File Format: AVI  
 Frame Rate: 12fps  
 Lens: f=3.6 ;F=2.4;54°  
 Image Process: Automatic White balance  
 Transmission Interface: USB Interface Revision 1.1  
 Working Temperature: 0-40°C  
 Operation System: Windows® 98/Me/2000/XP  
**For other questions or hints, visit <http://www.pccerisis.com/prdsupic.htm>**